



JIMI HENDRIX FUZZ WAH

SET-UP INSTRUCTIONS

1. Insert a 9 volt battery and/or plug in AC Adapter. The Fuzz Wah will operate on either power source.

The Fuzz Wah is the classical configuration for achieving some of the legendary sounds of the 60's. Its rugged construction and efficient design will give years of outstanding performance.

OPERATING INSTRUCTIONS

- By rocking your foot back and forth on the pedal, you can change the effect that the Fuzz Wah has on the tone of your instrument instantaneously. Toe down will give you more treble, heel down will give you more bass. The speed and amount of effect you use depends on your style of playing.

- When placing the pedal in one position, you will hear a boost in that particular frequency. This boost can be used to add sustain and create feedback of a desired overtone.

- When using the Wah Fuzz configuration in a set position, it will have a pronounced effect when set over short scale ranges.

TIPS

- When using a lot of distortion, the effect will not be as prominent. Try setting the pedal in one position. This will help in making artificial harmonics and controlling the amount of feedback.

Notice: This unit is shipped from the factory without a battery to prevent damage from leakage. A 9-volt transistor battery must be installed for operation if an AC adapter is not going to be used. We recommend a high quality alkaline battery.

The adapter jack requires a positive tip, 3.5mm plug. Most standard 9VDC AC adapters with greater than 20ma current capacity will work.

To install the battery, remove 4 screws from the rubber feet securing the bottom cover and insert the battery.

2. Run a cord from your instrument to the Fuzz Wah's instrument jack.

3. Run another cord from your amplifier input to the Fuzz Wah's Amplifier jack

4. Turn on the amplifier and begin playing.


5. To turn the Wah on, push the toe of the pedal all the way down firmly until you feel a "click". The green LED will turn on. To turn the Wah off, push the toe of the pedal down again, until you feel another "click".

To turn the Fuzz on, push the switch on the right hand side of the pedal in. The red LED will turn on. (The Wah can be turned on and off without effecting the Fuzz.)

When the button on the left hand side of the pedal is out, the Fuzz is placed after the Wah in the effects chain. (Wah Fuzz)

When the button on the left hand side of the pedal is in, the Fuzz is placed before the Wah in the effects chain. (Fuzz Wah)

Although usually positioned in the beginning, The Fuzz Wah can be placed anywhere in the effects chain.

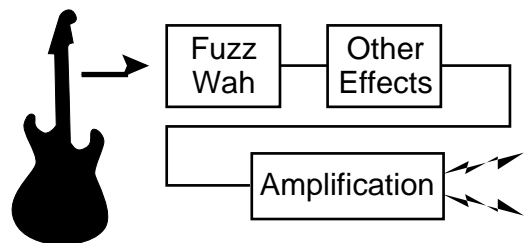

DUNLOP MANUFACTURING, INC.
P.O. Box 846, Benicia, CA 94510 U.S.A.
Tel: 707/745-2722 Fax: 707/745-2658

DUNLOP MANUFACTURING, INC.
P.O. Box 846, Benicia, CA 94510 U.S.A.
Tel: 707/745-2722 Fax: 707/745-2658